

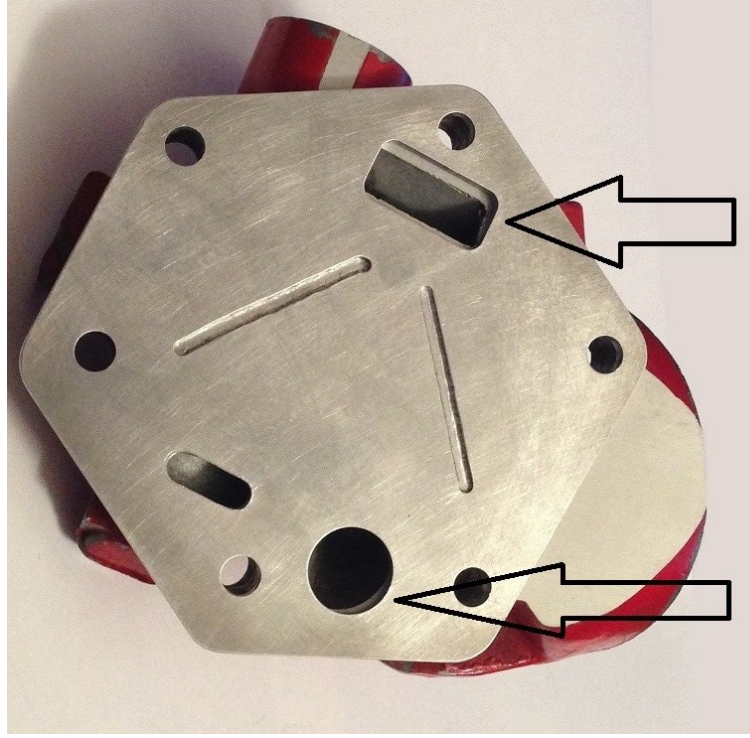


**DO NOT USE GASKET "A"
THAT DOES NOT HAVE
PASSAGE LIKE GASKET "B"**

ON EITHER SIDE OF PLATE

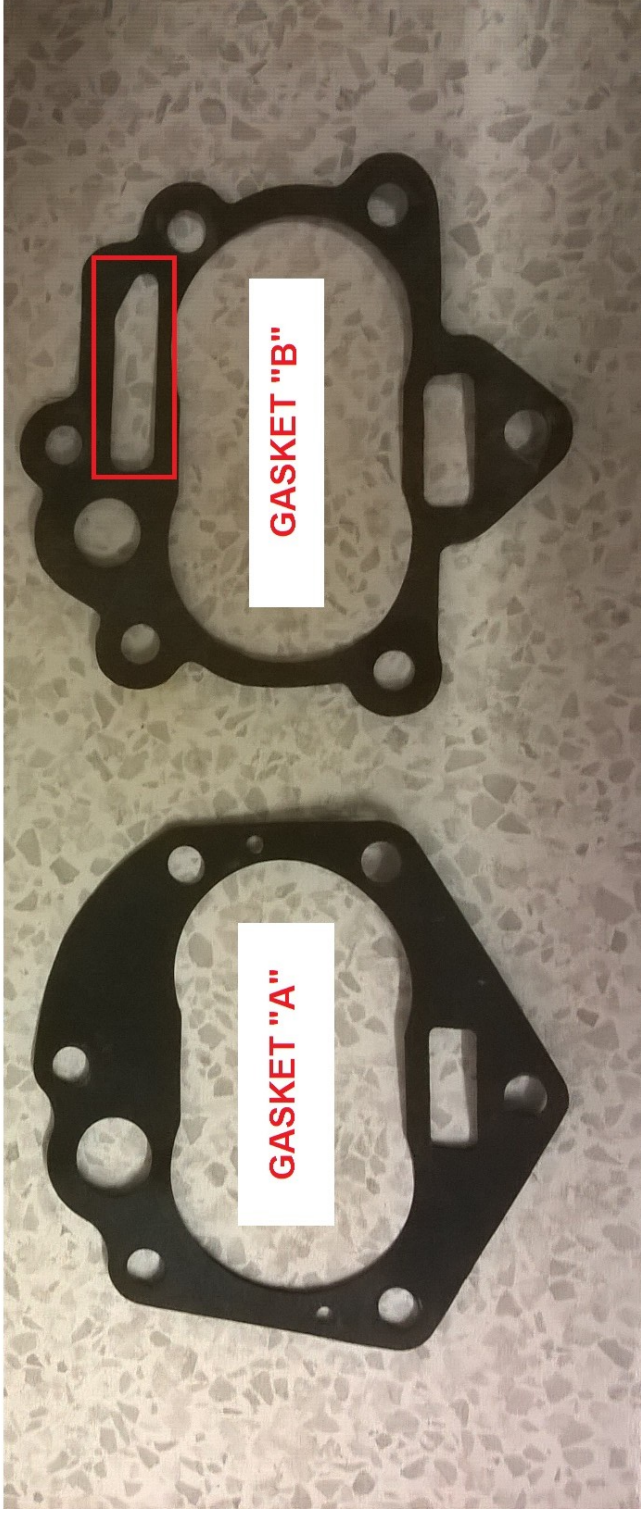

BLEND COVER AT ARROWS

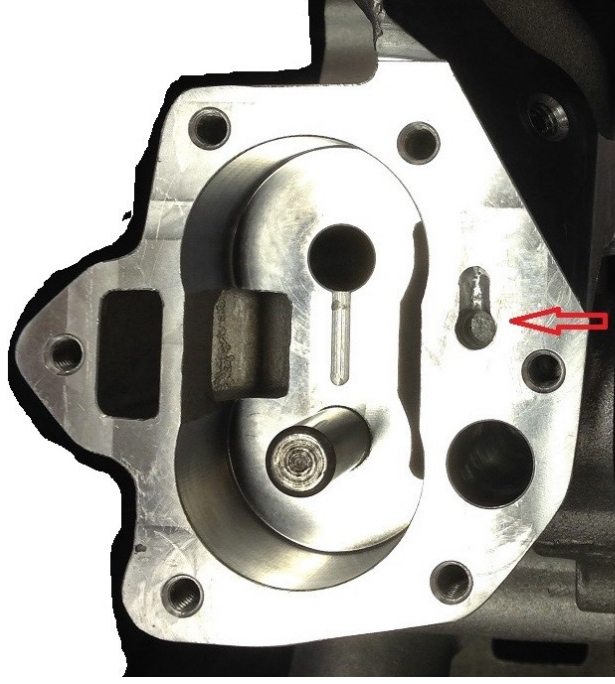

**If 455 T/A timing cover does not
have this 1/4" hole it must be drilled**